


P-Series User Guide

P-Series Setup (TOX)

1. Push & Lock Track Adapter into the Track


- Insert the adapter into the track, so that the mechanical key (B) in the adaptor matches the groove (A) in the track. Rotate the locking lever (C) about 90 degrees until it reaches the lock position.
- Use Knob (D) to select the circuit the fixture will draw power from.

One-Type Track (-TOX)

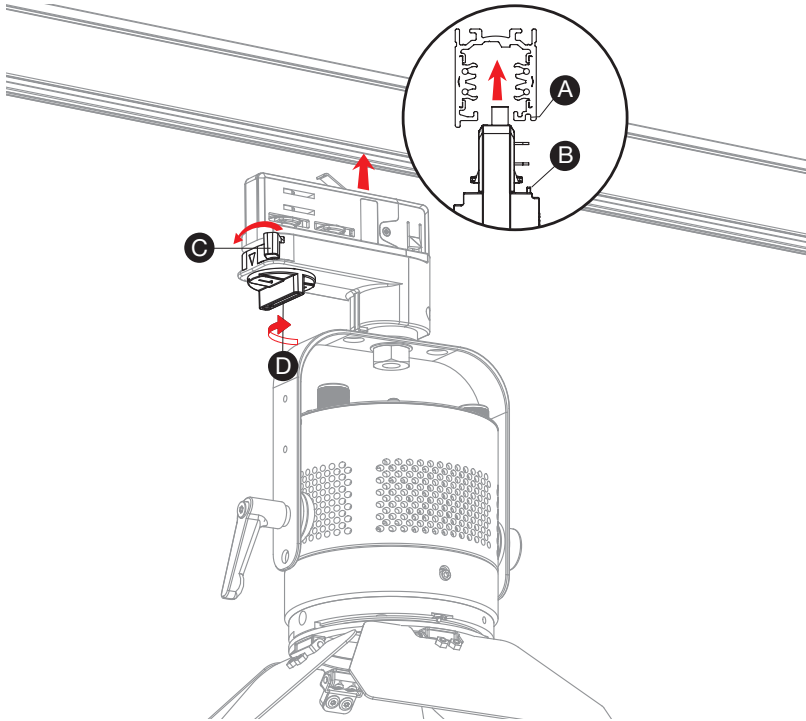

2. Connect the Power Cord

- Connect the power supply DC cord to the light fixture.
- Once assembly is complete, turn on track power and turn the intensity knob on the light fixture to confirm it is operational.
- Adjust the fixture to the desired angle using the tilt lock lever.

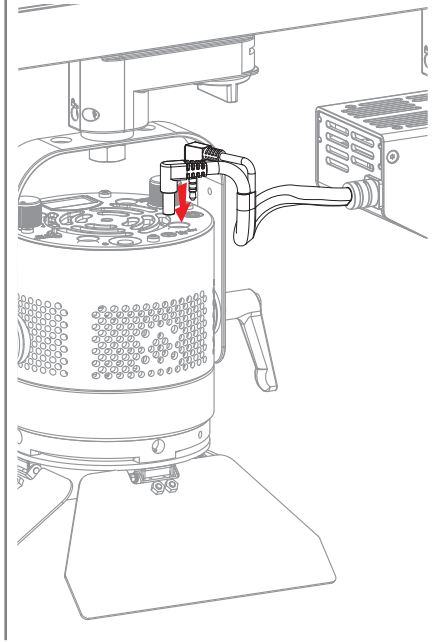

DMX Addressing Instructions

Set DMX Address

Upon powering the fixture, twist the Menu knob to access the DMX Address menu. Press the Menu knob once to enter address edit mode. Adjust the DMX address by twisting the knob to the desired value, then press the knob again to save. (DMX address will automatically save after 5s of inactivity.)



DMX Signal

When the fixture is not connected to DMX signal, the screen will display 'NO DMX'. Once connected, it will display 'DMX OK'.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

071625B