



P3W 4 Leaf Barndoor

Installation Instructions

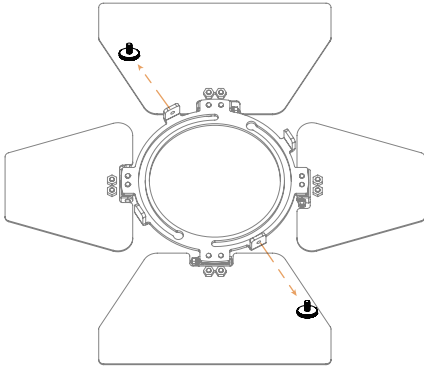


Step 1

Loosen the two thumb screws located on the barndoor assembly.

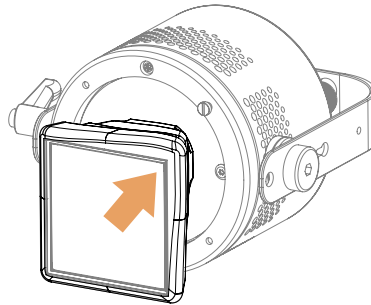


Step 2

Pull back the rubber protective cover on one corner of the P3W unit.

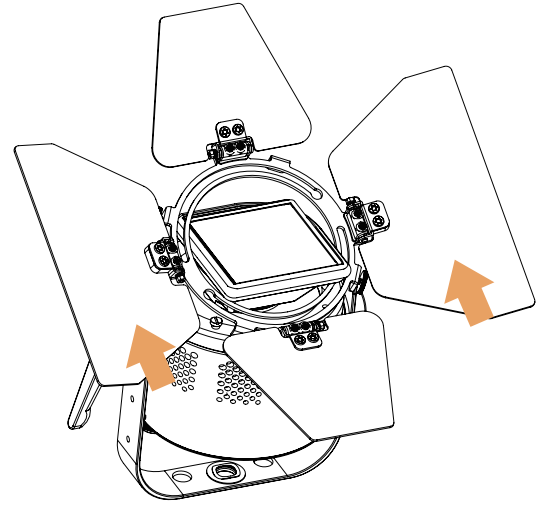


Step 3

Angle the barndoor at 45°, positioning the larger leaves on the left and right sides of the P3W unit. Slide the barndoor upward from the bottom so it slots onto the silver pre-secured screws.

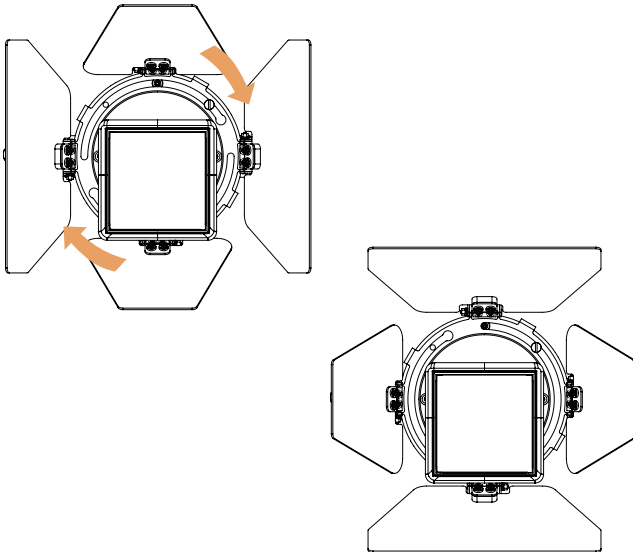

Step 4

Pull the rubber protective cover back into position. Rotate the barndoor assembly clockwise until it reaches your desired angle.

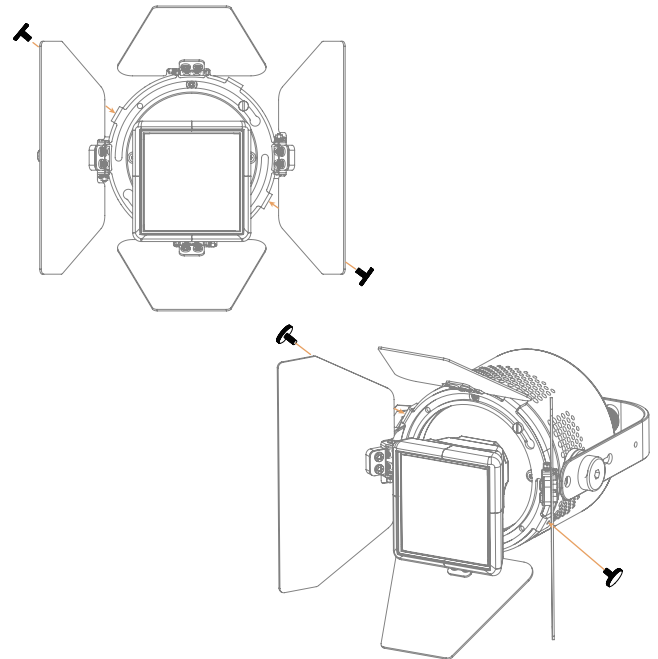

Step 5

Insert the two included thumb screws into the barndoor's side holes and tighten securely to fasten.